

# Triac Dimmable Driver - Constant Voltage PWM Output Series 100W

## ■ Features



- Output constant voltage
- Range AC input:180-240VA
- Efficiency :up to 83%
- Protections:short circuit/over loading/over current /Over temperature
- Full protection aluminum housing easy installation IP66 design for outdoor installation
- Cooling by free air convection
- Work with leading edge,or trailing edge Triac dimmer
- Strong compatibility, flicker-free dimming
- Suitable for LED lighting and moving sign applications

## ■ Specification


CE A U X IP66 SELV

Model		SC-100-12	SC-100-24
Output	DC Voltage	12V	24V
	Voltage Tolerance	±0.5V	
	Rated current	8.3A	4.17A
	Rated power	100W	
Input	Voltage Range	180-240V AC	
	Frequency Range	47-63HZ	
	Power Factor	PF≥0.65/180VAC PF≥0.65/230VAC PF≥0.65/240VAC(Full loading)	
	Full Load Efficiency(Typ.)	80%	83%
	AC Current (Max.)	1.09A	1.05A
	Leakage current	<0.50mA	
Protection	Short Circuit	Hiccup mode,recovers automatically after fault condition is removed	
	Over load	≤120%	
	Over Current	≤1.2*I out	
	Over Temperature	100°C±10°C shut down o/p voltage, re-power on to recover	
Environment	Working TEMP.	-40-+70°C	
	Working Humidity	20-95%RH,non-condensing	
	Storage TEM.,Humidity	-40-+80°C,10-95%RH	
	TEMP.coefficient	±0.03%/°C(0-50°C)	
	Vibration	10~500Hz 2G 10min./1 cycle,period for 60min.each along X,Y,Z axes	
Safety&EMC	Safety standards	EN61347-1 EN61347-2-13	
	Withstand voltage	I/P-O/P:3.75KVAC I/P-FG:1.88KVAC O/P-FG:0.5KVAC	
	Isolation resistance	I/P-O/P I/P-FG O/P-FG:100MΩ/500VDC/25°C/70%RH	
	EMC EMISSION	EN55015,EN61000-3-2,3 (≥60%loading)	
Others	Weight	1.1Kg	
	Size	230*70*43mm(L*W*H)	
	packing	245*75*65mm inner box340*275*170mm outside carton10 PCS /CTN	
Notes	1. All parameters NOT specially mentioned are measured at 230VAC input , rated load and 25°C of ambient temperature.		

# Triac Dimmable Driver - Constant Voltage PWM Output Series 100W

2. Tolerance: includes set us tolerance, line regulation and load regulation .
3. The power supply is considered as a component that will be operated in combination with final Equipment. Since EMC performance will be affected by the complete installation, the final equipment manufactures must be-qualify EMC Directive on the complete installation again
4. Loading range from 5% to 100%

## ■ Mechanical Specification

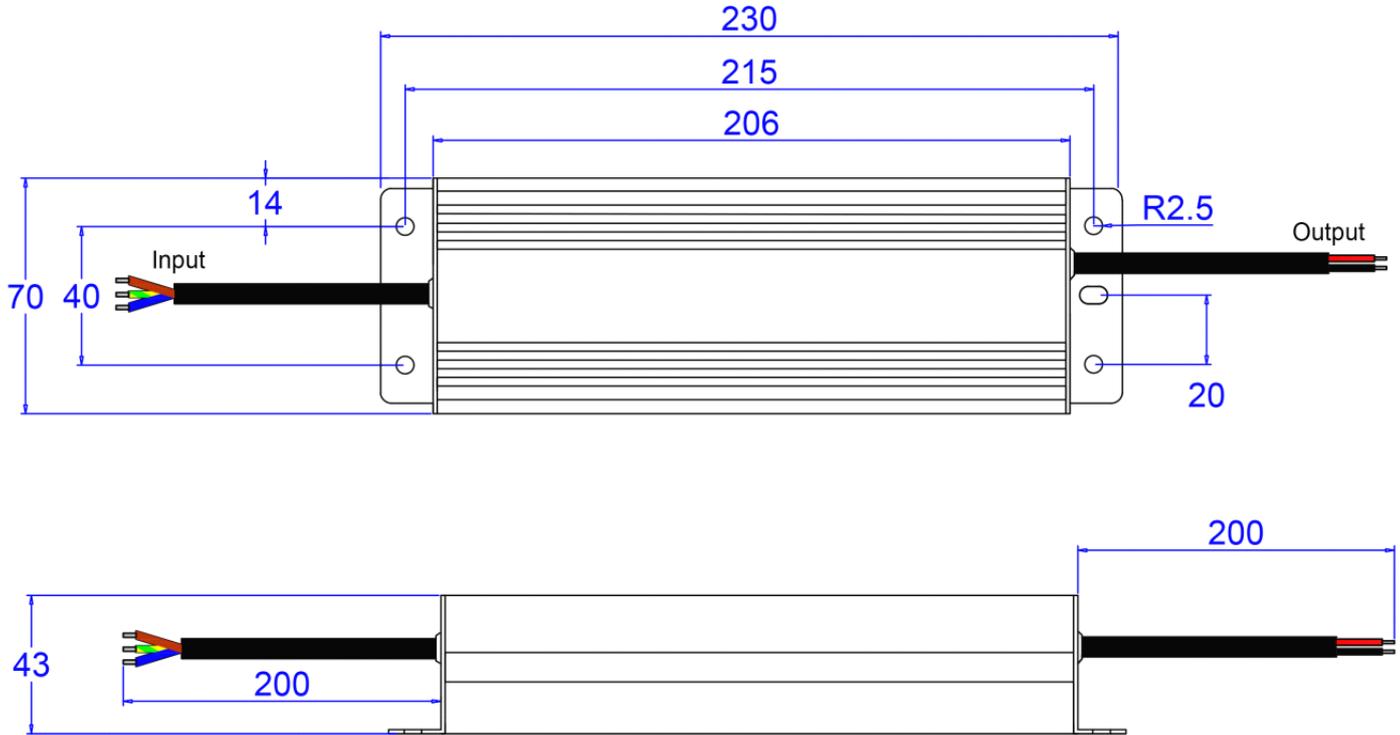

## ■ Label

<p>● L Brown</p> <p>● N Blue</p> <p>Input</p> <p>Y/G</p> <p>⊕</p>	<p><b>LED Driver (Triac Dimming - Leading edge)</b></p> <p><b>Constant Voltage</b></p> <p>Model: KVP-12100-TD</p> <p>Input: 180-240V~ 1.09A 50/60Hz</p> <p>Output: 12V=8.33A 100W</p> <p>ta: 40°C tc: 70°C</p> <p><small>Building 3, No.19, Yongtian Road, Qianshan Industrial Zone, Zhuhai City, Guangdong Province, China</small></p>	<p>+ Red ●</p> <p>● Output</p> <p>- Black ●</p> <p>• tc</p> <p>CE</p> <p>IP66 SELV</p>
---	---	--

※**Input Rubber cable:** H05RN-F 3G 1.0mm<sup>2</sup>,the green/yellow cable connect with (FG) ,Brown with AC (L),Blue with AC(N)

※**Output rubber cable :**H07RN-F 2\*1.5mm<sup>2</sup> Red is output ( V+) Positive,Black is output (V-) negative. Connected to LED Lamps.

※Please make sure you connect these correctly otherwise your product will not function correctly and could be damaged.

※Note: Any other requests we can customized.

## ■ Dimming Operation

※Output constant current level can be adjusted through input terminal of the AC phase line(L) by connection a triac dimmer.




※Usually matching with leading edge Triac Dimmers ( In order to matching trailing edge dimmer can be customized.)

※please try to use the small power dimmer, have access to a wider dimming range, high-power dimmer is difficult to

## Triac Dimmable Driver - Constant Voltage PWM Output Series 100W


※please try to use dimmers with power at least 3 times as the output power of the driver.

### ■ Connecting Diagram

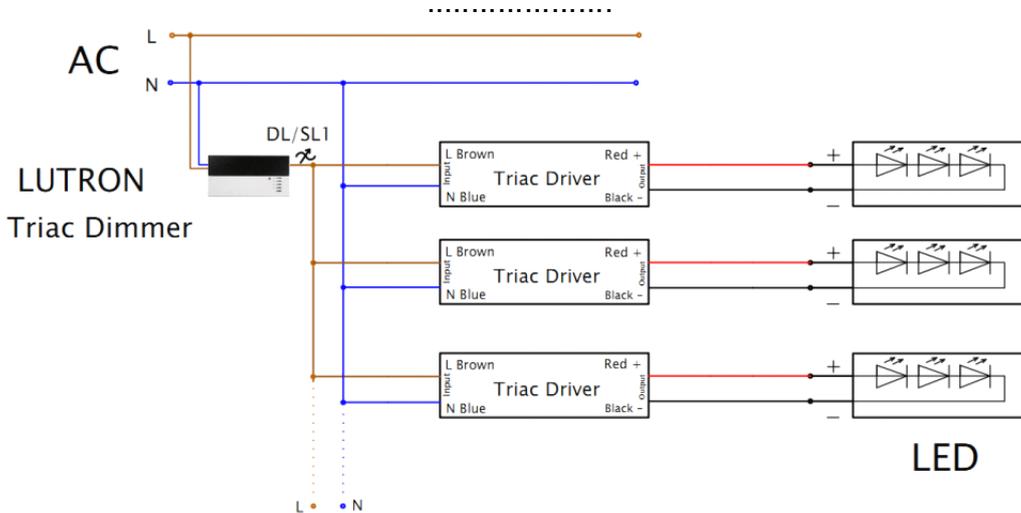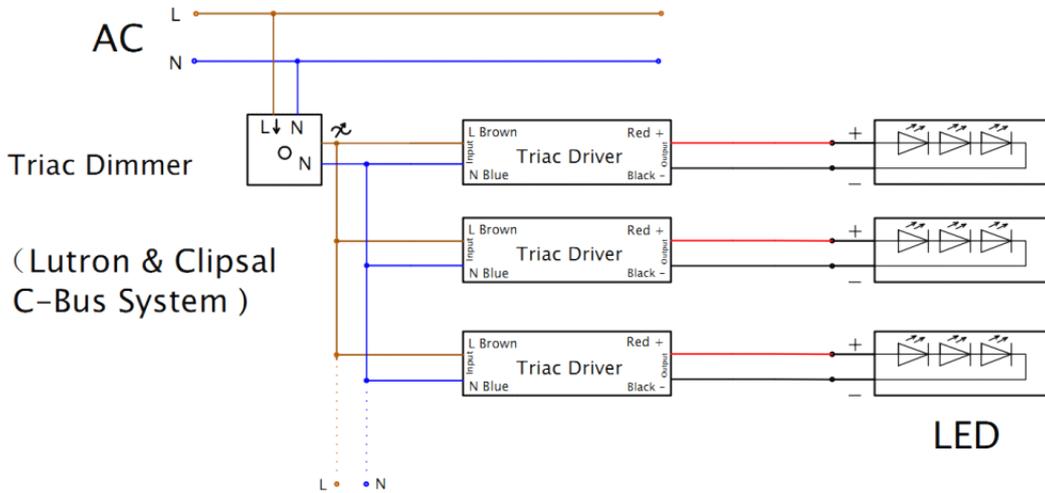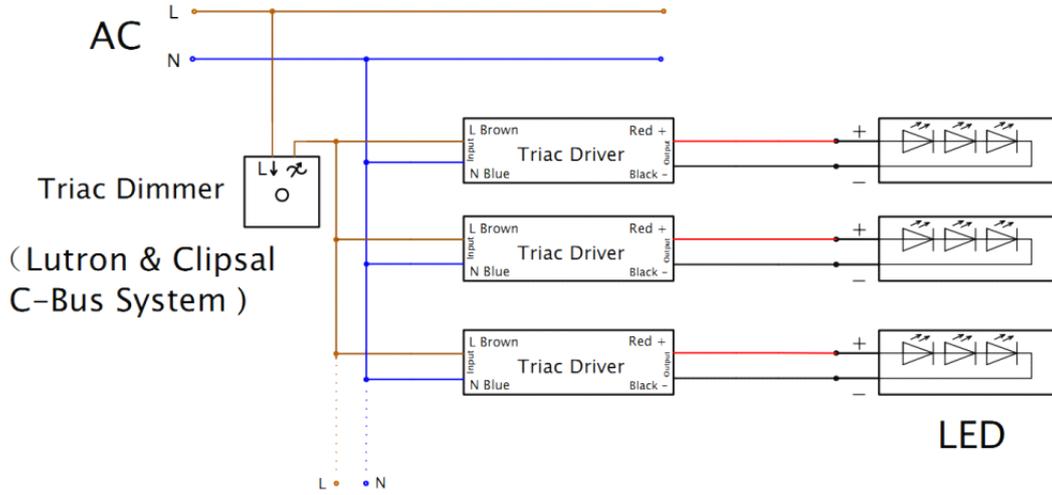

## Triac Dimmable Driver - Constant Voltage PWM Output Series 100W

### ■ Derating Curve

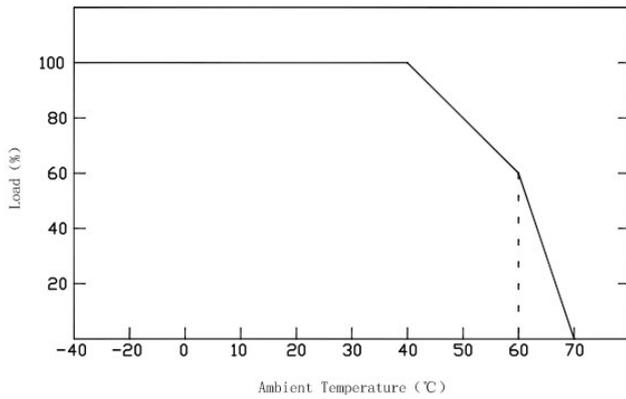

※To extend their life, please refer to the Derating Curve and derate according to the temperature.

### ■ Instruction

- 1) This driver should be installed by qualified and professional person;
- 2) Please make sure the transformer is installed with adequate ventilation around it allow for heat dissipation.
- 3) Ensure that wiring is correct before test in order to avoid light and power supply damage;
- 4) If driver cannot work normally, don't maintain privately; have any question, please contact Wellforces